April 2012

# Type ACE95jr Tank Blanketing Valve

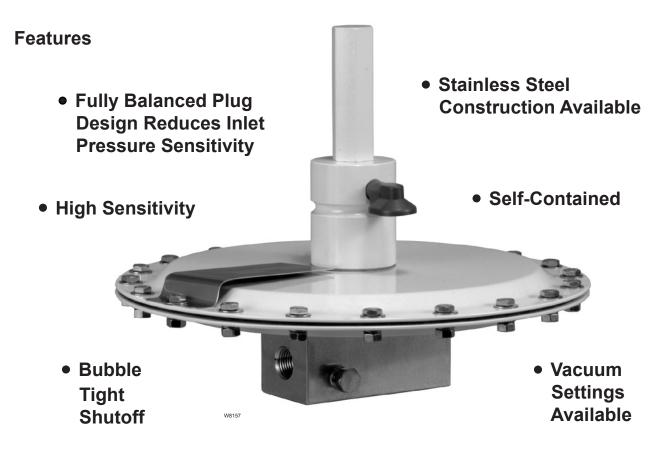


Figure 1. Type ACE95jr Tank Blanketing Valve

### Introduction

Tank blanketing is the process of using a gas, usually an inert gas such as nitrogen, to maintain a slightly positive pressure in an enclosed storage tank. Tank blanketing prevents a stored product from vaporizing into the atmosphere, reduces product combustibility, and prevents oxidation or contamination of the product by reducing its exposure to air. Tank blanketing is utilized with various products, including: adhesives, pharmaceuticals, pesticides, fertilizers, fuels, inks, photographic chemicals, and food additives.

Type ACE95jr valves are self-contained, fully balanced, and used for accurate pressure control on tank blanketing systems. These valves help control emissions and provide protection against atmospheric contamination. Type ACE95jr valves maintain a positive tank pressure which reduces the possibility of tank wall collapse during pump out operations and prevents a stored product from vaporizing to atmosphere.





## **Specifications**

### Sizes and End Connection Styles

1/2 NPT

1 x 1/2 NPT

1 NPT

NPS 1/2 / DN 15. CL150 RF

NPS 1 / DN 25, CL150 RF

NPS 1 x 1/2 / DN 25 x 15, CL150 RF

NPS 1 / DN 25, Sanitary Flange

### Maximum Operating Inlet Pressure(1)

200 psig / 13.8 bar

# Maximum Emergency Outlet (Casing) Pressure(1)

20 psig / 1.4 bar

# Maximum Operating Control Pressure(1)

1.5 psig / 0.10 bar

### Control Pressure Ranges(1)

See Table 1

#### **Maximum Differential Pressures**

Up to 200 psig / 13.8 bar

#### **Main Valve Flow Characteristic**

Linear

#### **Pressure Registration**

External

#### Capacities

See Table 4

Temperature Capabilities(1)

Nitrile (NBR):

-20 to 180°F / -29 to 82°C

Fluorocarbon (FKM):

0 to 212°F / -18 to 100°C

Ethylenepropylene (EPDM - FDA):

-20 to 212°F / -29 to 100°C

Perfluoroelastomer (FFKM):

-20 to 212°F / -29 to 100°C

### Flow Coefficients for Relief Valve Sizing

(110% of rated  $C_v$ )

 $C_{v}$  0.2 use  $C_{v}^{v}$  0.22

 $C_{v}$  0.4 use  $C_{v}$  0.44

### **IEC Sizing Coefficients**

 $X_{r}$ : 0.655;  $F_{p}$ : 0.86;  $F_{l}$ : 0.89

### **Construction Materials**

Body: 316 Stainless Steel

**Trim:** 304 Stainless Steel and 316 Stainless Steel **Elastomers:** Nitrile (NBR), Fluorocarbon (FKM),

FDA-Ethylenepropylene (EPDM), or

Perfluoroelastomer (FFKM)

**Diaphragm:** Polytetrafluoroethylene (PTFE) **Actuator:** 316 Stainless Steel or Carbon Steel

### **Approximate Weight (with all accessories)**

30 pounds / 14 kg

Table 1. Control Pressure Ranges

OUTLET (CONTROL PRESSURE RANGE)		SPRING PART NUMBER	SPRING MATERIAL	SPRING FREE LENGTH		SPRING WIRE DIAMETER	
inches w.c.	mbar			inches	mm	inches	mm
-5 to -0.5	-12 to -1	GC220701X22	Stainless Steel	2.75 0.88	69.8 22.4 <sup>(1)</sup>	0.080 0.085	2.03 2.16 <sup>(1)</sup>
-1 to 1	-2 to 2	GC220701X22	Stainless Steel	2.75 1.60	69.8 40.6 <sup>(1)</sup>	0.080 0.065	2.03 1.65 <sup>(1)</sup>
0.5 to 5 4 to 10	1 to 12 10 to 25	GC220701X22 GC220702X22	Stainless Steel Stainless Steel	2.75 2.00	69.8 50.8	0.080 0.112	2.03 2.84
8 to 15 0.5 to 1.5 psig	20 to 37 34 to 103	GC220703X22 GC220708X22	Stainless Steel Stainless Steel	2.00 2.75	50.8 69.8	0.125 0.225	3.17 5.71

### **Features and Benefits**

**Large PTFE Diaphragm**—Resistant to corrosion and highly sensitive to changes in tank pressure.

**Fully Balanced**—Eliminates setpoint changes caused by variations in inlet pressure.

**Large Actuator**—Large actuator diaphragm increases sensitivity to tank pressure changes.

**Rolling Diaphragm**—The rolling diaphragm balances the pilot valve and eliminates friction, resulting in extremely accurate control.

# **Options and Accessories**

**Inlet Pressure Gauge**—Displays pressure of blanketing gas supply to the tank blanketing valve.

**Control Pressure Gauge**—Low-pressure gauge to measure control pressure (tank pressure).

**Purge Meter (Rotameter)**—Maintains a small amount of flow through the sensing or main line. Prevents corrosive tank vapors from damaging upstream equipment.

**Pressure Switch**—Allows installation of an alarm system to indicate low or high-pressure on the tank.

<sup>1.</sup> The pressure/temperature limits in this Bulletin, and any applicable standard or code limitation should not be exceeded.

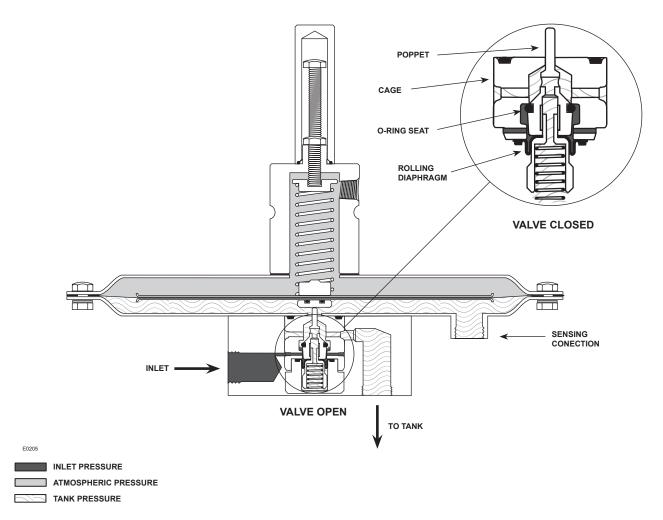


Figure 2. Operational Schematic

**Outlet Check Valve**—Prevents corrosive gases and vapors from flowing back into the blanketing system through the delivery line.

**Single Array Manifold (SAM)**—Provides sense line connection and main valve connection through a single tank nozzle.

**Inlet Filter**—Screens out any foreign material upstream that may cause blockage in the gas flow.

# **Principle of Operation**

The Type ACE95jr tank blanketing valve controls the vapor space pressure over a stored liquid. When liquid is pumped out of the tank or vapors in the tank condense, the pressure in the tank decreases. Tank pressure is sensed by the large actuator diaphragm. When tank pressure is less than the valve set pressure, spring force moves the actuator diaphragm downward.

When the actuator moves downward, it pushes open the valve plug which allows flow in to the tank. See Figure 2. When pressure in the tank increases above setpoint, the large actuator diaphragm is pushed upward, allowing the valve plug to close.

The valve plug is balanced (inlet pressure creates equal upward and downward force on these components); therefore, the outlet (control) pressure of the unit is not affected by fluctuating inlet pressure.

### Installation

The Type ACE95jr tank blanketing valve was assembled and preset to the customer specified pressure and setpoint at the factory. The outlet (control) pressure range of the valve is stamped on the nameplate fastened to the upper actuator case. The gas blanketing setpoint is the only adjustable feature on this unit.

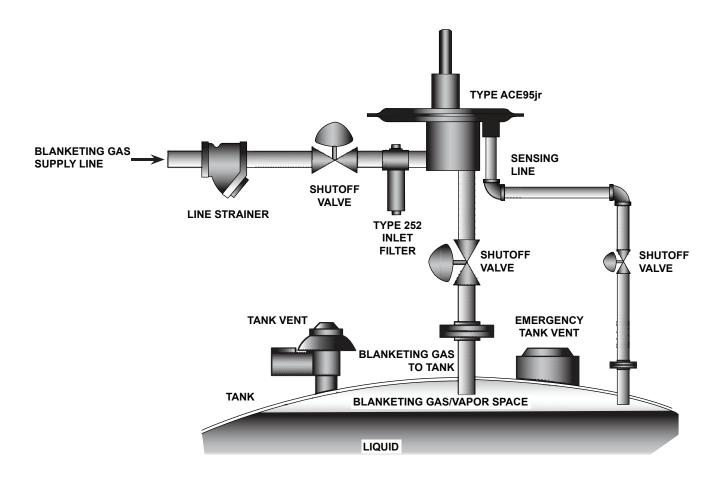


Figure 3. Type ACE95jr Tank Blanketing Valve Installation

When installing Type ACE95jr, the sensing line and gasto-tank line must always be above the tank liquid level and should slope down towards the tank without any traps to avoid catching of liquid. Inlet supply line may be installed with a filter and the outlet piping should be full-sized and self draining to the tank and also valves and vents must be full line size and should be mounted above the tank.

# **Sizing Methods**

# **Direct Displacement**

Use the direct displacement method with extreme caution. The direct displacement method determines the amount of blanketing gas required to replace liquid pumped out of the tank. Direct displacement does not account for fluctuating temperature or other factors that may affect pressure in the vapor space. This method is typically applied to tanks operating at constant temperatures and containing non-flammable, non-volatile products.

$$Q_{total} = Q_{pump}$$

where,

= Required Flow Rate

 $\boldsymbol{Q}_{\text{total}}$  $Q_{\text{pump}}^{^{\prime}}$ = Required Flow Rate to replace pumped

out liquid from Table 2

### **API 2000**

The American Petroleum Institute Standard 2000 (API 2000) sizing criteria accounts for liquid pump out as well as contraction of tank vapors due to cooling. When using API methods:

$$Q_{total} = Q_{pump} + Q_{thermal}$$

where,

= Required Flow Rate

 $\mathbf{Q}_{ ext{total}}$   $\mathbf{Q}_{ ext{pump}}$ 

= Required Flow Rate to replace pumped out liquid from Table 2

 $\mathsf{Q}_{\text{thermal}}$ 

= Required Flow Rate due to thermal cooling. See Thermal Equations 1 through 4

## Thermal Equations

For tanks up to 840,000 gallons / 3180 m³ capacity:

### **Equation 1:**

$$Q_{thermal}$$
 [SCFH air] =  $V_{tank} \times 0.0238$ 

### **Equation 2:**

$$Q_{thermal}$$
 [SCFH nitrogen] =  $V_{tank}$  x 0.0238 x 1.015

### **Equation 3:**

$$Q_{thermal}$$
 [Nm<sup>3</sup>/h air] =  $V_{tank}$  x 0.169

### **Equation 4:**

$$Q_{thermal}$$
 [Nm<sup>3</sup>/h nitrogen] =  $V_{tank}$  x 0.169 x 1.015

where,

For Equations 1 and 2:  $V_{tank}$  = tank volume, gallons For Equations 3 and 4:  $V_{tank}$  = tank volume, m<sup>3</sup>

Depending on the method, there can be a significant difference in the calculated required capacity. No matter which method is used, the tank must be equipped with supplemental venting to protect the tank, product, and personnel in cases of equipment failure, fire exposure, or other conditions that could cause the tank pressure or vacuum to exceed operating limits.

Table 2. Flow Rate Conversion(1)

MULTIPLY MAXIMUM PUMP RATE OUT:	ВҮ	TO OBTAIN(1):		
U.S. GPM	8.021	SCFH		
U.S. GPH	0.1337	SCFH		
m³/h	1.01	Nm³/h		
Barrels/h	5.615	SCFH		
Barrels/day	0.2340	SCFH		
Gas flow of blanketing gas to replace liquid pumped out.				

**Table 3**. Correction Factors (for converting nitrogen flow rates to other gas flow rates)

BLANKET GAS	SPECIFIC GRAVITY	CORRECTION FACTOR			
Natural Gas	ral Gas 0.60 1.270				
Air	1.00	0.985			
Dry CO <sub>2</sub>	1.52 0.797				
Correction Factor = $\frac{0.985}{\sqrt{\text{SG}}}$					

# **Capacity Information**

Capacity tables are based on 0.97 specific gravity nitrogen. Nitrogen is the most common blanketing gas. Should you use a different gas, convert the tabular values as follows. For blanketing (pad) gases other than nitrogen, multiply the given nitrogen flow rate by the correction factors in Table 3. For gases of other specific gravities, multiply the given nitrogen flow rate by 0.985, and divide by the square root of the appropriate specific gravity.

Table 4. Capacities in 0.97 Specific Gravity Nitrogen

	INLET PR	ESSURE		C <sub>v</sub> = 0.2, SCFH / Nm³/h		C <sub>v</sub> = 0.4, SCFH / Nm <sup>3</sup> /h	
psig	bar	kg/ cm²	kPa	SCFH	Nm³/h	SCFH	Nm³/h
1 <sup>(1)</sup>	0.07	0.07	6.90	42	1.1	84	2.2
2 <sup>(1)</sup>	0.14	0.14	13.8	61	1.6	120	3.2
5 <sup>(1)</sup>	0.34	0.35	34.5	98	2.6	210	5.6
10	0.69	0.70	69.0	130	4.6	310	8.3
15	1.0	1.06	103	160	4.3	400	10.7
20	1.4	1.41	138	210	5.6	480	12.9
25	1.7	1.76	172	250	6.7	550	14.7
30	2.1	2.11	207	290	7.7	630	16.9
40	2.8	2.81	276	370	9.9	780	20.9
50	3.4	3.52	345	450	12.1	930	24.9
60	4.1	4.22	414	530	14.2	1070	28.7
70	4.8	4.92	483	610	16.3	1230	33.0
80	5.5	5.63	552	690	18.5	1390	37.3
90	6.2	6.33	621	780	20.9	1560	41.8
100	6.9	7.03	690	860	23.0	1720	46.1
120	8.3	8.44	827	1020	27.3	2040	54.7
140	9.6	9.85	965	1180	31.6	2360	63.2
160	11.0	11.3	1103	1340	35.9	2680	71.8
180	12.4	12.7	1241	1500	40.2	3000	80.4
200	13.8	14.1	1379	1660	44.5	3330	89.2
1. Assumes an outlet (control) pressure of 5-inches w.c. / 12 mbar or less.							

# **Ordering Information**

Refer to the Specifications section on page 2. Carefully review each specification and construction feature, then complete the Ordering Guide.

Also, please complete the Specifications Worksheet at the bottom of the Ordering Guide on page 7.

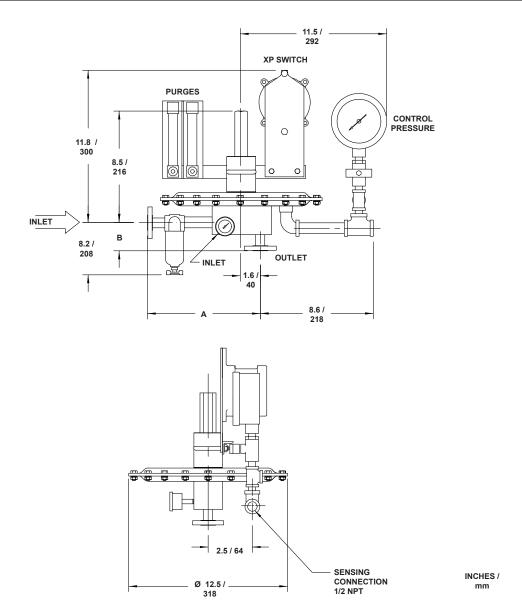


Figure 4. Type ACE95jr Dimensions

Table 5. Type ACE95jr Dimensions

BODY SIZE,		STRUCTURE	DIMENSIONS					
NPS	S / DN	STRUCTURE	NPT		CL150 RF Flange		Sanitary	
	A							
NPS	DN		inches	mm	inches	mm	inches	mm
1/0	1/2 15	without Filter	3.7	94	9.7	246		
1/2		with Filter	8.1	206	10.1	256		
1		without Filter	7.5	190	9.8	249	9.4	238
1	25	with Filter	11.8	300	10.2	259	10.0	254
	В							
1/2		without Check valve	1.0	25	2.9	74		
1/2	15	with Check valve	3.8	96	5.7	145		
4	0.5	without Check valve	4.7	119	3.0	76	2.8	71
1	25	with Check valve	7.5	190	5.8	147	5.6	142

# **Ordering Guide**

Body Size and Connection Styles (Select One)  1/2 NPT  1 x 1/2 NPT  NPT  NPS 1/2 / DN 15, CL150 RF  NPS 1 / DN 25, CL150 RF  NPS 1 x 1/2 / DN 25 x 15, CL150 RF  NPS 1 / DN 25, Sanitary Flange  Actuator/Diaphragm (Select One)  Carbon Steel with PTFE Diaphragm  Stainless Steel with PTFE Diaphragm	Accessories (Optional)  Inlet Pressure Gauge Control Pressure Gauge Purge Meter (Rotameter) Pressure Switch Outlet Check Valve Inlet Filter  Single Array Manifold (Optional) Yes, please add a SAM unit to my order. Applicable only for 1/2 NPT body size and end connection.
Elastomers (Select One)  ☐ Nitrile (NBR)  ☐ Fluorocarbon (FKM)  ☐ Ethylenepropylene (EPDM - FDA)  ☐ Perfluoroelastomer (FFKM)	Parts Kit (Optional)  ☐ Yes, please send one parts kit to match this order.
Main Valve Coefficient (Select One)  □ C <sub>v</sub> - 0.2 □ C <sub>v</sub> - 0.4	
Control Pressure Range (Select One)  □ -5 to -0.5 inches w.c. / -12 to -1 mbar  □ -1 to 1 inch w.c. / -2 to 2 mbar  □ 0.5 to 5 inches w.c. / 1 to 12 mbar  □ 4 to 10 inches w.c. / 10 to 25 mbar  □ 8 to 15 inches w.c. / 20 to 37 mbar  □ 0.5 to 1.5 psig / 0.03 to 0.10 bar	

Regulators Quick Order Guide					
* * *	Readily Available for Shipment				
* *	* * Allow Additional Time for Shipment				
* Special Order, Constructed from Non-Stocked Parts. Consult Your local Sales Office for Availability.					
Availability of the product being ordered is determined by the component with the longest shipping time for the requested construction					

# 

#### **Industrial Regulators**

# **Emerson Process Management Regulator Technologies, Inc.**

USA - Headquarters McKinney, Texas 75069-1872, USA Tel: +1 800 558 5853 Outside U.S. +1 972 548 3574

Asia-Pacific Shanghai 201206, China Tel: +86 21 2892 9000

Europe

Bologna 40013, Italy Tel: +39 051 419 0611

Middle East and Africa Dubai, United Arab Emirates

Tel: +971 4811 8100

For further information visit www.fisherregulators.com  $\,$ 

#### **Natural Gas Technologies**

# **Emerson Process Management Regulator Technologies, Inc.**

USA - Headquarters McKinney, Texas 75069-1872, USA Tel: +1 800 558 5853 Outside U.S. +1 972 548 3574

Asia-Pacific Singapore 128461, Singapore Tel: +65 6770 8337

Europe Bologna 40013, Italy Tel: +39 051 419 0611 Chartres 28000, France Tel: +33 2 37 33 47 00

#### **TESCOM**

# **Emerson Process Management Tescom Corporation**

USA - Headquarters Elk River, Minnesota 55330-2445, USA

Tels: +1 763 241 3238 +1 800 447 1250

Europe Selmsdorf 23923, Germany Tel: +49 38823 31 287

Asia-Pacific Shanghai 201206, China Tel: +86 21 2892 9499

The Emerson logo is a trademark and service mark of Emerson Electric Co. All other marks are the property of their prospective owners. Fisher is a mark owned by Fisher Controls International LLC, a business of Emerson Process Management.

The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. We reserve the right to modify or improve the designs or specifications of such products at any time without notice.

Emerson Process Management does not assume responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use and maintenance of any Emerson Process Management product remains solely with the purchaser.

